

WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.

elk HOME


ANY QUESTIONS CALL: 800-613-3261
M-F 8:00AM-6:00PM ET

CAUTION: To prevent shock, only plug in lamp after lamp assembly is complete.

WARNING: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

ITEM#: H0019-10360

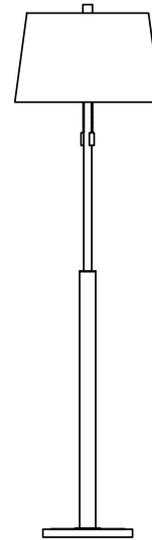

1. Carefully pull cord outward from base (D). Pull cord taut. Screw bottom column (H) onto top of base (G).
2. Ensure cord is pulled taut. Screw top column (K) onto top of bottom column (H).
3. Ensure cord is pulled taut. Screw lamp body (C) onto top of top column (K).
4. Remove yellow backing from non-slip mat (D). Center non-slip pad (M) onto underside of base (G). Press non-slip mat (M) onto underside of base (G). Press firmly on non-slip mat (D) to adhere non-slip mat (D) to underside of base (G).
5. Thread bottom of pipe (B) into hole in center of socket cluster.
6. Pass hole in bracket on shade (E) over top of pipe (B).
7. Thread finial (F) onto end of pipe (B). Tighten finial (F) to secure shade (E) in place. DO NOT over tighten.
8. Screw recommended bulb (not included) into socket (A). **WARNING:** Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.

